

---

# **SmartGear Projects Management V1r01 User's guide**

---



SMARTWARE - 49, avenue Aristide Briand - 92160 ANTONY – France

[www.smartware.fr](http://www.smartware.fr) - [support@smartware.fr](mailto:support@smartware.fr)

# Contents

|                             |          |
|-----------------------------|----------|
| <b>OVERVIEW .....</b>       | <b>3</b> |
| <b>USER INTERFACE .....</b> | <b>4</b> |
| MAIN SCREEN.....            | 4        |
| MENU: FILE.....             | 5        |
| MENU: VIEW .....            | 5        |
| PROJECT SECTION VIEW .....  | 6        |
| STATION SECTION VIEW.....   | 7        |

## Overview

SmartGear Projects Management is a user friendly application intended for the management of SmartGear Project.ini files.

### Requirements:

- Microsoft Windows NT, 2000 or XP
- SmartGear application v1r00 or later

### Reference files:

- SMARTGEAR Applications Programmer Manual v1r02
- SMARTGEAR User Guide v1r02

# User interface

## Main screen

The *figure 1* describes the different parts of the user interface.

At the start of the application, the SmartGear Project Selection list is filled and sorted by name based on the SmartGear projects under the directory “c:\SmartGear\Project”.

The first sorted name of SmartGear project.ini is used by default and displayed.

To see the settings in the Project or Station sections, click on the “+” to expand the information.

The “information” View summarizes some settings of the station selected. This view is in read only mode.

The “Save” button saves the current configuration into the project.ini of the SmartGear project selected.

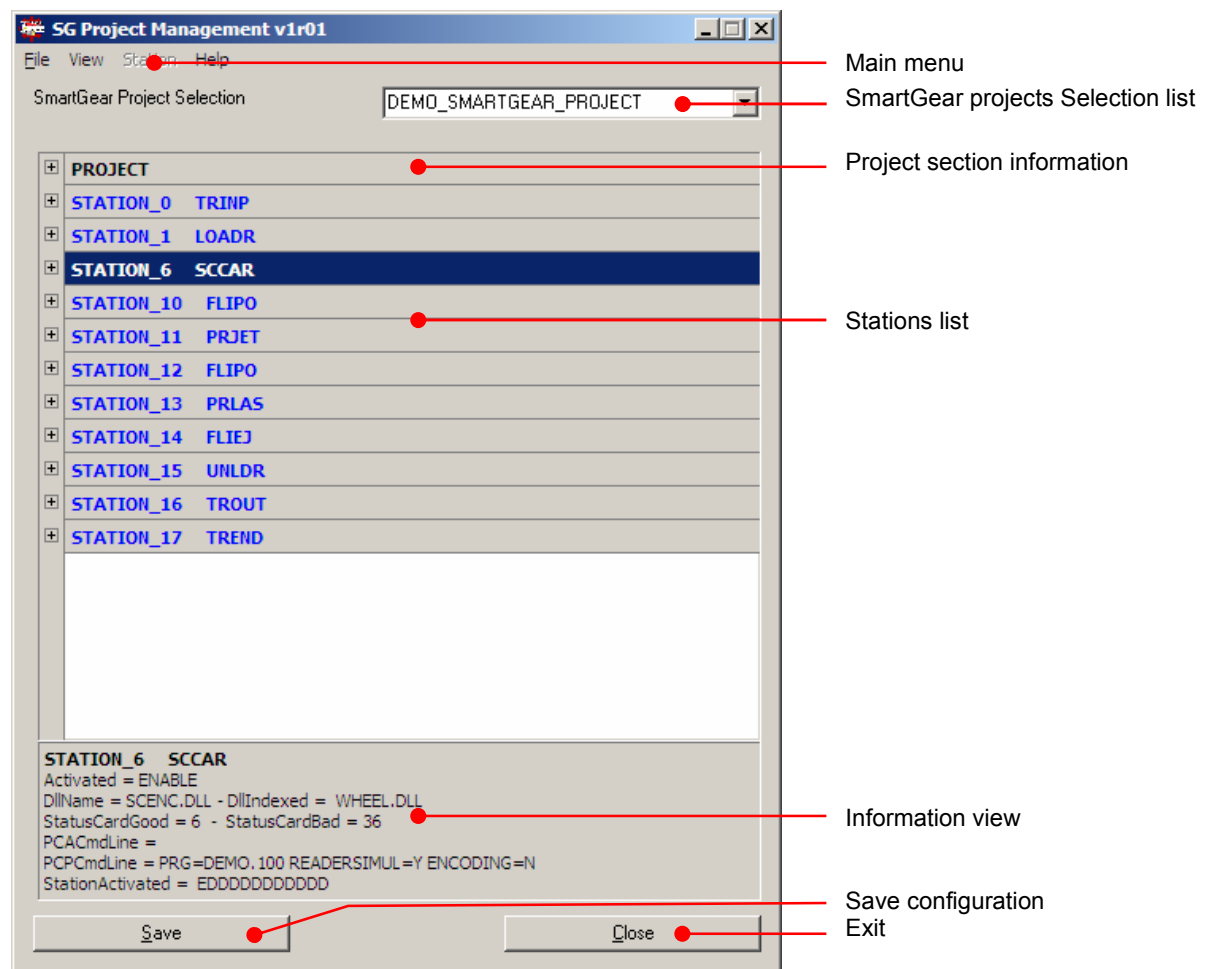


Figure 1 – Main screen

## Menu: File

The File menu allows saving the modification made or to exit from the application.

- “Save”: Save the changes into the current project.ini file.
- “Save As”: Allows saving the current configuration to another file (to save in a different directory and/or change the file name).
- “Exit”: Exit from the application.

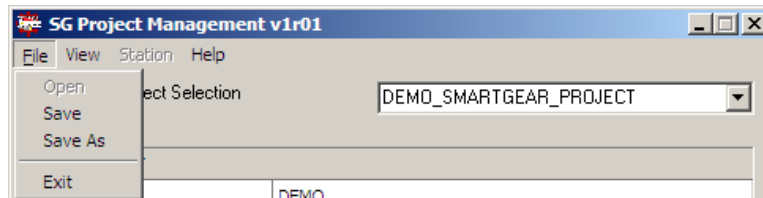


Figure 2 - FILE Menu

## Menu: View

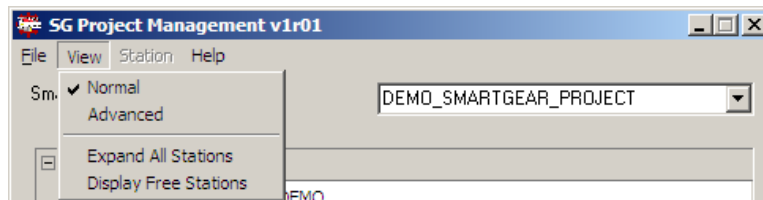


Figure 3 - View Menu

- “Normal”: Displays the minimum of information required. Depending on the Project or Station lines, different list of key words will be displayed:
  - Project section: the name, jobDLLname and projectDLLname.
  - Stations section: Activated.
- “Advanced”: Displays all information by section based on the SmartGear User Guide. The propriety sections (Key words not defined in the SmartGear User Guide) are not displayed in the list.
- “Expand All Stations”: Expand all section in order to display the information following the mode “normal” or “Advanced” selected in this menu.
- “Display Free Stations”: By default, the free stations are not indicated in the station list, check this option to display them.

## PROJECT section view

Following the *View* mode set, the *PROJECT* section will be displayed with more or less information.

If the “Normal” view is selected, the name, ProjectDllName and JobDllName sections will be filled.

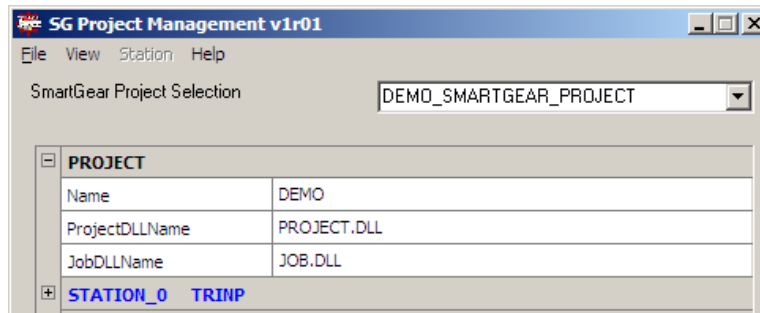


Figure 4 - PROJECT Section, “Normal” View

In Advanced view, all information based on the SmartGear User Guide are displayed.

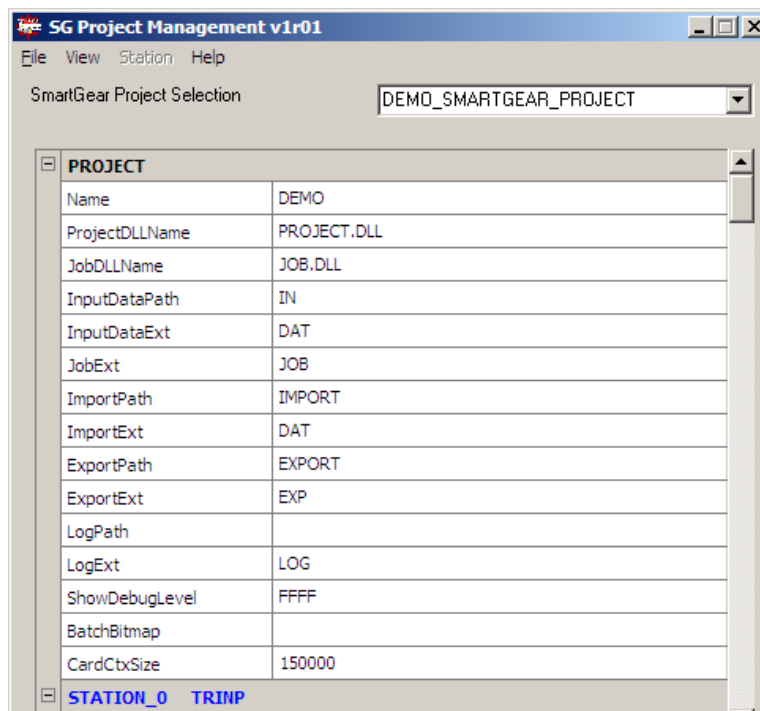


Figure 5 - PROJECT Section, “Advanced” View

All values can be modified by double click on.

To apply the new settings, “Save” button has to be clicked or from the main menu.

## STATION section view

Each Station line is named by the station number and its StepType key word.

Ex: station for 6 (StepType=SCCAR): STATION\_6 SSCAR

Following the “Activated” value, the station lines are displayed in different colors:

- Blue for “Enable” stations.
- Red for “Disable” stations.

As for “Project” view, the set of information by station is based on the view mode set: “Normal” or “Advanced”.

In “Normal” view mode, only the “Activated” key value is indicated.

For indexed stations, such as Smart Cards Carousel (Barrel), the indexed activated values are defined by a series of squares colored in Green (for “Enable”) or Red (for “Disable”).

A simple click on the colored square changes the activation (Enable/Disable).

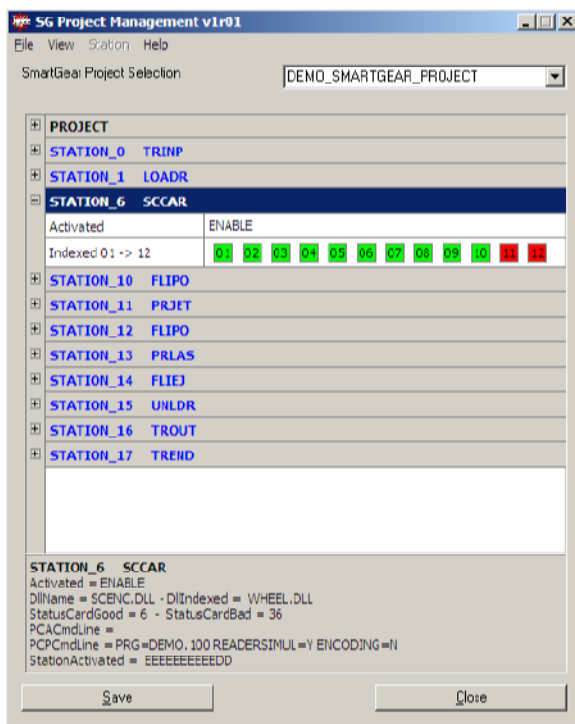


Figure 6 - STATION Section, “Normal” View

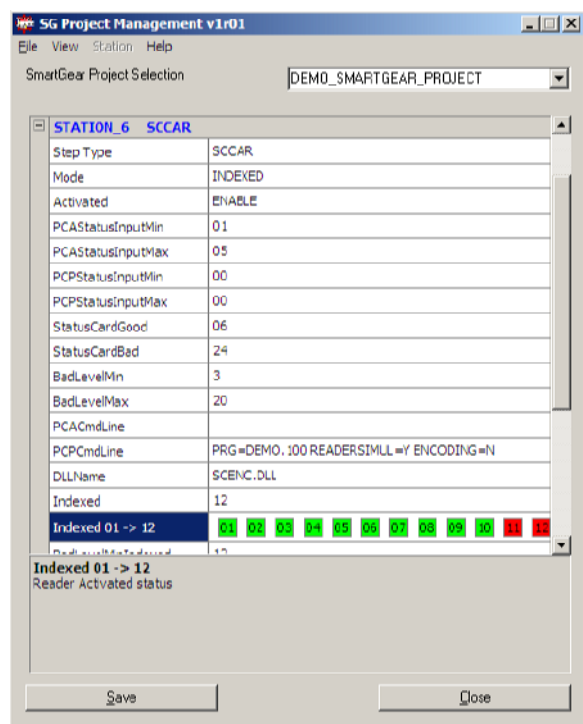


Figure 7 - STATION Section, “Advanced” View

To modify the settings, simply click on the value.

For “Mode”, “Activated” and “Step Type”, different lists are displayed, and then select the new value to apply. For the other parameters, double click to allow editing, and write the new value.

 


Figure 8 - STATION Section,  
Modification of a list selection value.

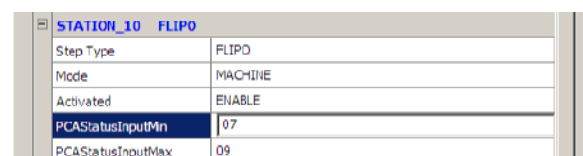


Figure 9 - STATION Section,  
Modification of an editing value.